

FleetCam Pro Titan User Manual

Version 1.0c



Table of contents

Download & Install.....	3
Connect to FleetCam Wi-Fi (iOS)	4
Connect to FleetCam Wi-Fi (Android)	5
Camera calibration	6
Add-on cameras	10
Blinker configuration.....	12
Server configuration	13
Wi-Fi configuration.....	14

Download & Install Titan App

Locate the app by searching for “Forward Thinking Systems” in the app store of choice.

Apple App Store: <https://apps.apple.com/us/app/titan-fts/id1502411212>

Android Google Play: <https://play.google.com/store/apps/details?id=com.ftsgps.titan>

Select the TITAN application icon and tap **INSTALL**.



Figure 1. Titan App Icon

Power on the FleetCam unit.

After the FleetCam has powered up the Wi-Fi hotspot can be made available by pushing the access button twice. (See figure 2)

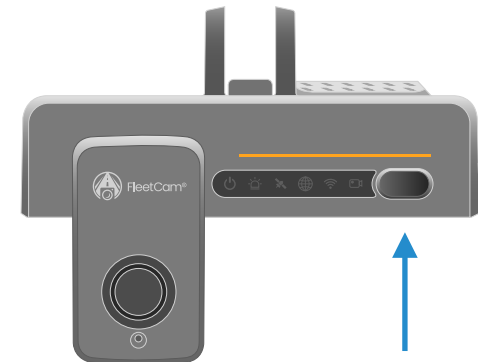


Figure 2. Double tap to activate Wi-Fi hotspot

Connect to FleetCam Wi-Fi (iOS)

Camera Configuration with TITAN iOS

Step 1 – Find Camera's SSID

The camera's SSID is a 10-character code listed on the MDVR device.

The SSID typically starts with ST- on the installer's tablet/phone.

Step 2 – Login to Titan App

Use the Titan login credentials your account manager has provided you to login into the Titan App.

Step 3 – Connect to Camera Wi-Fi

Installers can connect to the camera's Wi-Fi using one of three ways:

Search Nearest Camera

Select Search Nearest Camera.

Ensure TITAN is being used within the camera's Wi-Fi range and installers are selecting the correct ST- number.

Tap Join.

Select Wi-Fi From Settings

Go into iOS Settings and tap Wi-Fi.

Select the correct camera's SSID from the list of options.

Exit iOS Settings and re-enter the TITAN app.

Select the camera's SSID under Current Camera Wi-Fi on the TITAN app to join.

Insert SSID

Select Insert SSID and manually enter the camera's SSID.

The screenshot shows the 'Calibration' screen of the TITAN app. At the top, there is a hamburger menu icon and the title 'Calibration'. Below the title, there are three main sections: 'CURRENT CAMERA WI-FI', 'OPTIONS', and 'Insert SSID'. The 'CURRENT CAMERA WI-FI' section displays the SSID 'ST-00D200168E'. The 'OPTIONS' section contains two buttons: 'Search Nearest Camera' and 'Select Wi-Fi from Settings'. The 'Insert SSID' section is currently empty. At the bottom right of the screen, there is a camera icon and the word 'Calibration' in orange text.

Connect to FleetCam Wi-Fi (Android)

Camera Configuration with TITAN Android

Step 1 – Find Camera's SSID

The camera's SSID is a 10-character code listed on the MDVR device.

The SSID typically starts with ST- on the installer's tablet/phone.

Step 2 – Login to Titan App

Use the Titan login credentials FTS has provided you to login into the Titan App.


Step 3 – Connect to Camera Wi-Fi

Connect to the camera Wi-Fi by tapping on the camera's SSID.

When prompted, select Connect.

Once connected to the camera's Wi-Fi, proceed with the FleetCam calibration.

Note: If a camera is not listed, tap the refresh icon.

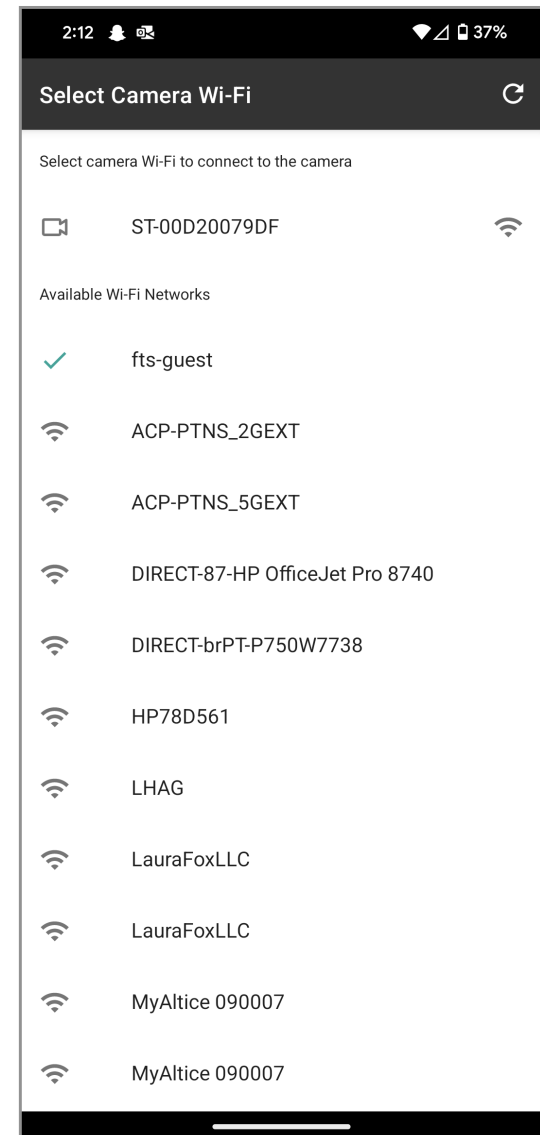


Calibrate FleetCam Pro AI Cameras

Camera Configuration with TITAN iOS & Android

Select Camera

Select a camera from the Camera List to enter Calibration Mode.

Successfully calibrated cameras have a checkmark in their column.

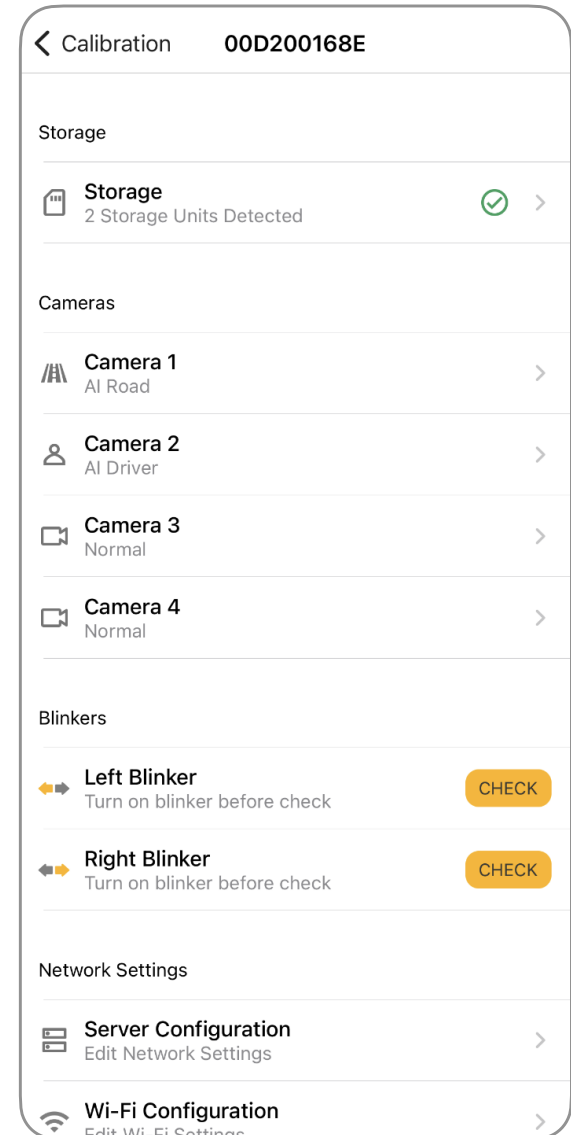

Calibrate FleetCam Pro AI Cameras


Camera Configuration with TITAN iOS & Android

Calibrating the AI Road Camera

Toggle the **AI Calibration Mode** button to put the camera into Calibration Mode.

Enter **Camera height of the FC Pro AI cam**.

This is a height measurement from the ground to the road cam lens and it can be entered in either inches or centimeters (select unit of measure accordingly).

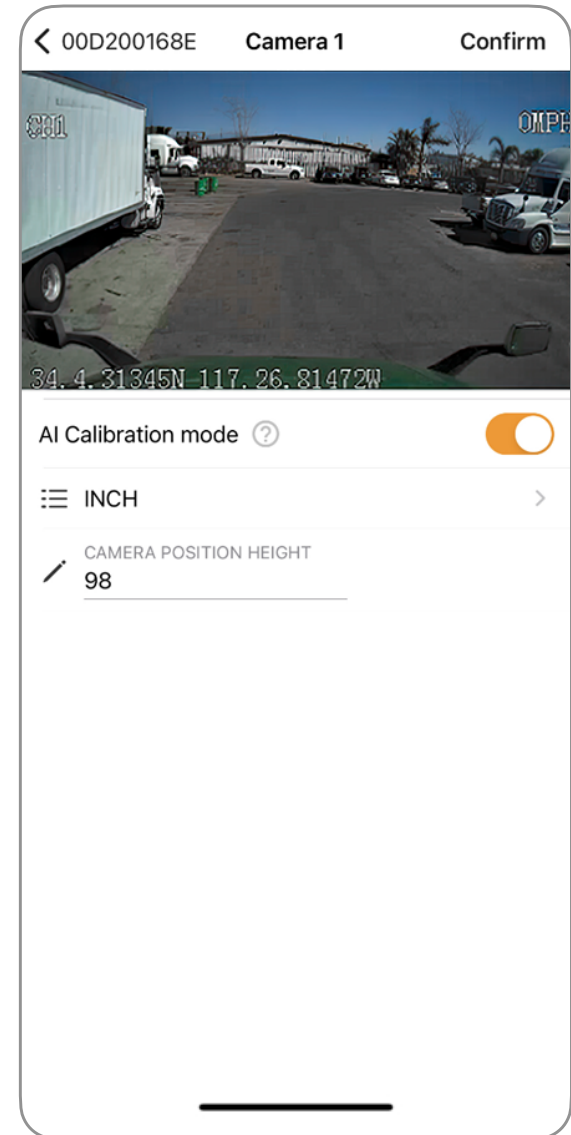

Calibrate FleetCam Pro AI Cameras

Camera Configuration with TITAN iOS & Android

Desired mounting location is the center of the windshield. If the camera is installed in the center of the windshield, select **Centered**.

If the camera is not centered in the windshield, select **Not Centered**.
New fields will auto-populate.


Enter **Vehicle Front Width**. This indicates the distance **(3)** from the left edge of the vehicle to the right edge of the vehicle.

Enter **Camera Distance from Left Edge**. This indicates the distance **(2)** from the left edge of the vehicle to the FC Pro camera when looking towards the front of the vehicle.

Vehicle Hood Length (Optional): This measurement only needs to be entered on tractor trailer installations when the vehicle is equipped with a long hood.

After measurements have been entered, turn AI Calibration mode off and tap **CONFIRM** to save changes and return to camera selection list.

Maximum offset allowed is: 4 inches (10.16 cm).

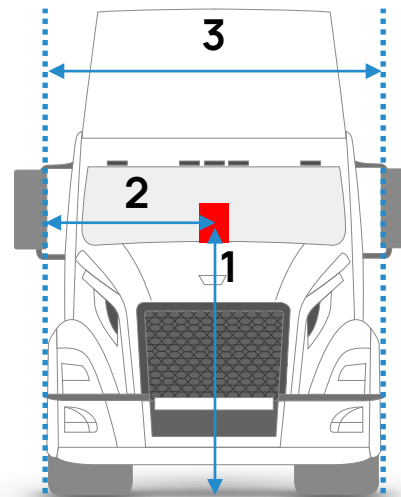

00D200168E Camera 1 Confirm

34.4, 31345N -117.26, 81472W

AI Calibration mode ? ☒

INCH >

CAMERA POSITION HEIGHT
98

Is camera centered in windshield? ?
☐ Centered ☒ Not Centered

VEHICLE FRONT WIDTH ?
93

CAMERA DISTANCE FROM LEFT EDGE ?
43

Vehicle Hood Length (Optional) ?
☐ Standard ☒ Short/Long

VEHICLE FRONT LENGTH
80

Calibrate FleetCam Pro AI Cameras

Camera Configuration with TITAN iOS & Android


Calibrating the AI Driver camera

Select Camera 2 (AI Driver) from the Camera List to calibrate AI Driver Cam.

Select the **Steering Wheel Position** from the drop-down menu. This indicates if the vehicle is left-hand or right-hand drive.

Adjust the driver cam lens so that the driver's face is just above the centerline of the live stream view by opening the bottom panel of the FC Pro camera and moving the adjustment tab to the correct position.

Tap **CONFIRM** to save changes and return to camera selection list.

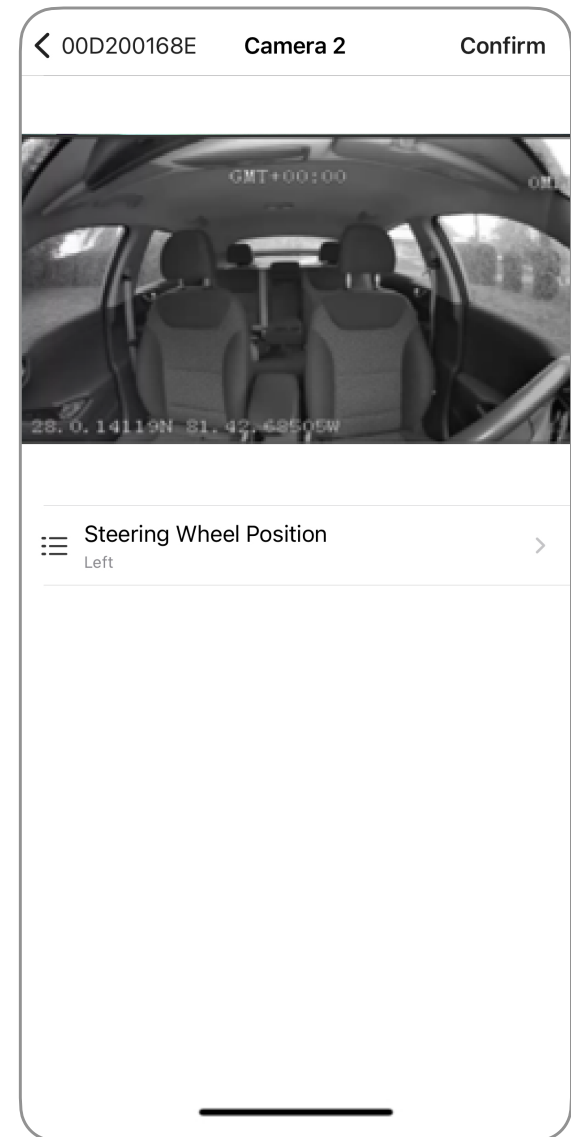


FleetCam Add-On Cameras

Camera Configuration with TITAN iOS & Android

Select camera

Select a camera from the Camera List to view and adjust camera angle.

Successfully completed cameras have a checkmark in their column.

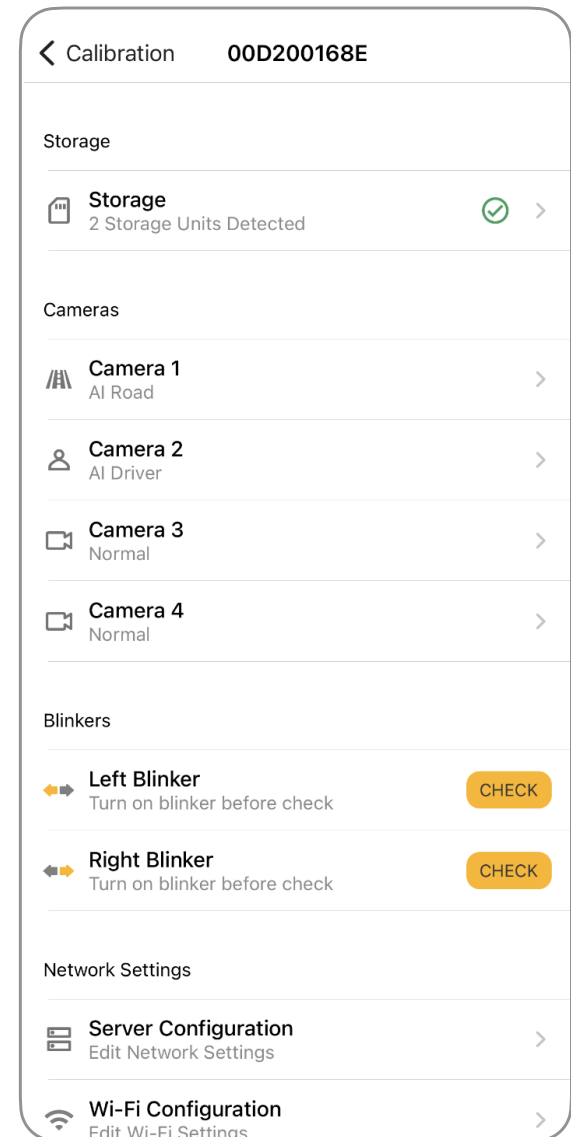


FleetCam Add-On Cameras

Camera Configuration with TITAN iOS & Android

Adjust camera to desired view.

If needed, tap **Flip Horizontal** or **Flip Vertical** to adjust the camera view.

Tap **CONFIRM** when the screen is displaying the proper camera view

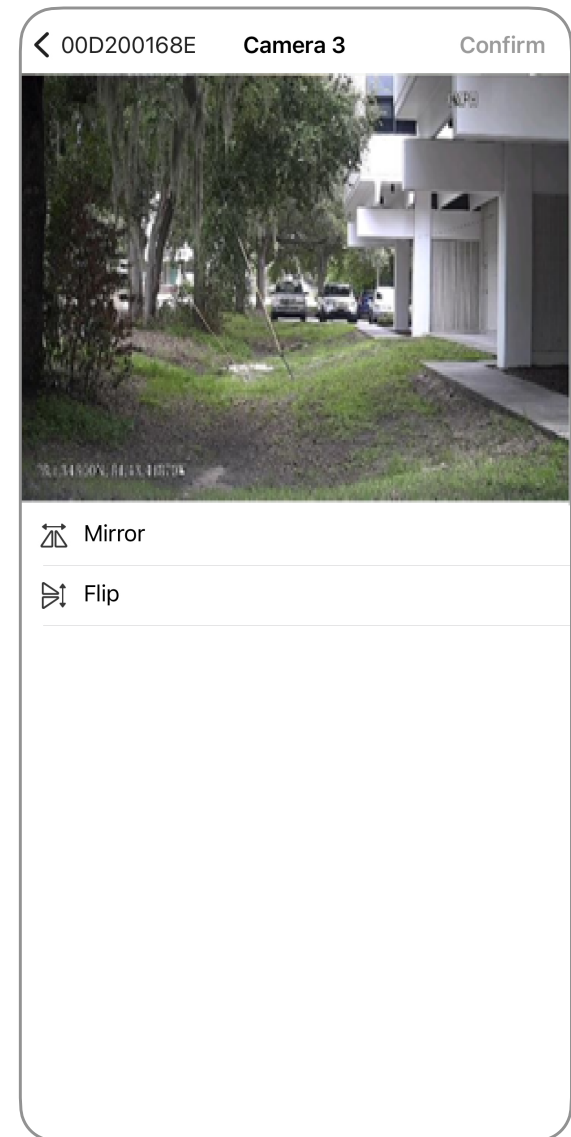

Blinker Configurations (Optional)

Camera Configuration with TITAN iOS & Android


Left Blinker

1. Turn on the left blinker.
2. Tap the **CHECK** button.

Right Blinker

1. Turn on the right blinker.
2. Tap the **CHECK** button.

Once complete, a checkmark appears in place of the CHECK button.

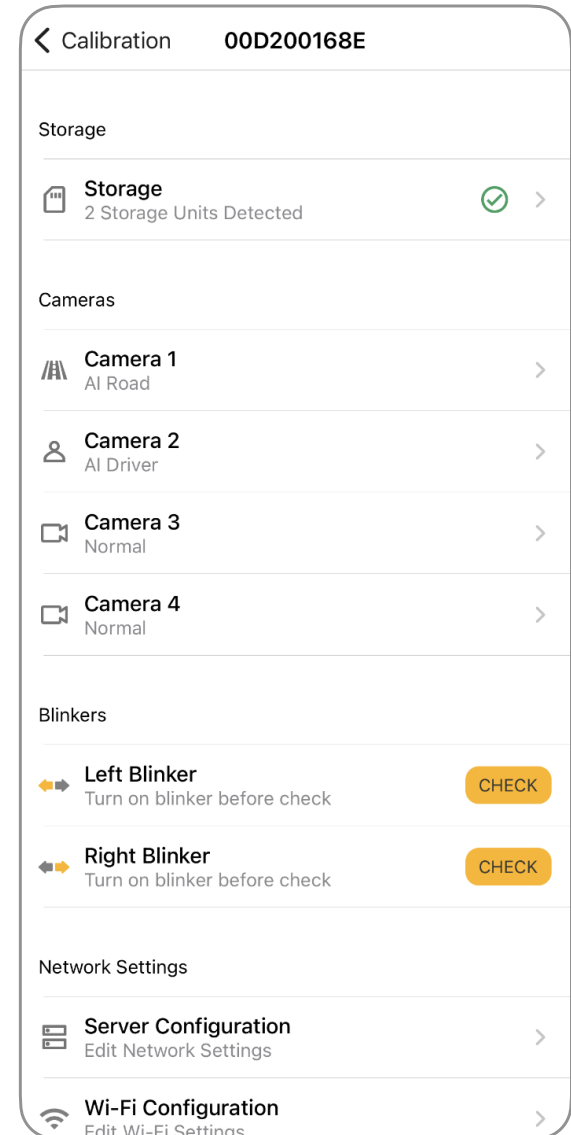

Server configuration


Camera Configuration with TITAN iOS & Android

Ethernet – Connects the camera to the server through an ethernet cable.

Wi-Fi – Connects the camera to the server through Wi-Fi.

Cellular – Connects the camera to the server through a SIM card.

Tap **Save**.

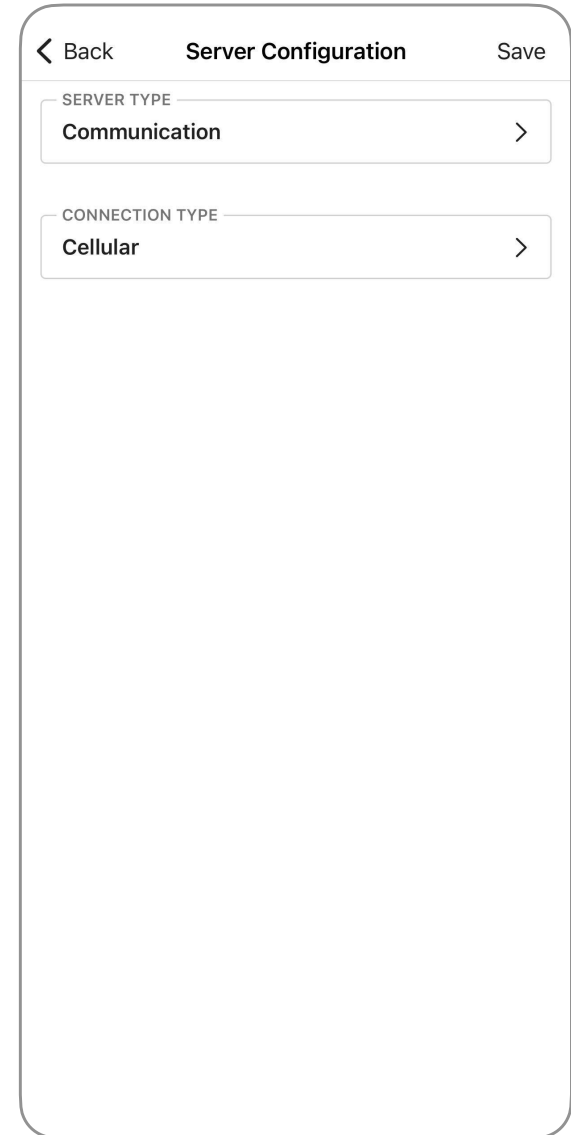

The screenshot shows a mobile application interface for 'Server Configuration'. At the top, there is a navigation bar with a back arrow, the title 'Server Configuration', and a 'Save' button. Below the navigation bar, there are two main sections. The first section is labeled 'SERVER TYPE' and contains a single option 'Communication' with a right-pointing chevron. The second section is labeled 'CONNECTION TYPE' and contains a single option 'Cellular' with a right-pointing chevron. The interface is clean and uses a light gray color scheme.

Wi-Fi configuration

Camera Configuration with TITAN iOS & Android

Wi-Fi Settings allow installers to connect a FleetCam camera to a local Wi-Fi network.

Wi-Fi Connection

Tap Wi-Fi Connection to open the drop-down list.

Select Connect to Wi-Fi.

SSID

Enter the SSID into the SSID text field.

TITAN requires an SSID to connect to the Wi-Fi.

Encryption Type


Select Wi-Fi Encryption type:

- None
- WEP
- WPA/WPA2-PSK
- WPA2-Enterprise

Password

Enter the password for the local Wi-Fi.

Tap Save.

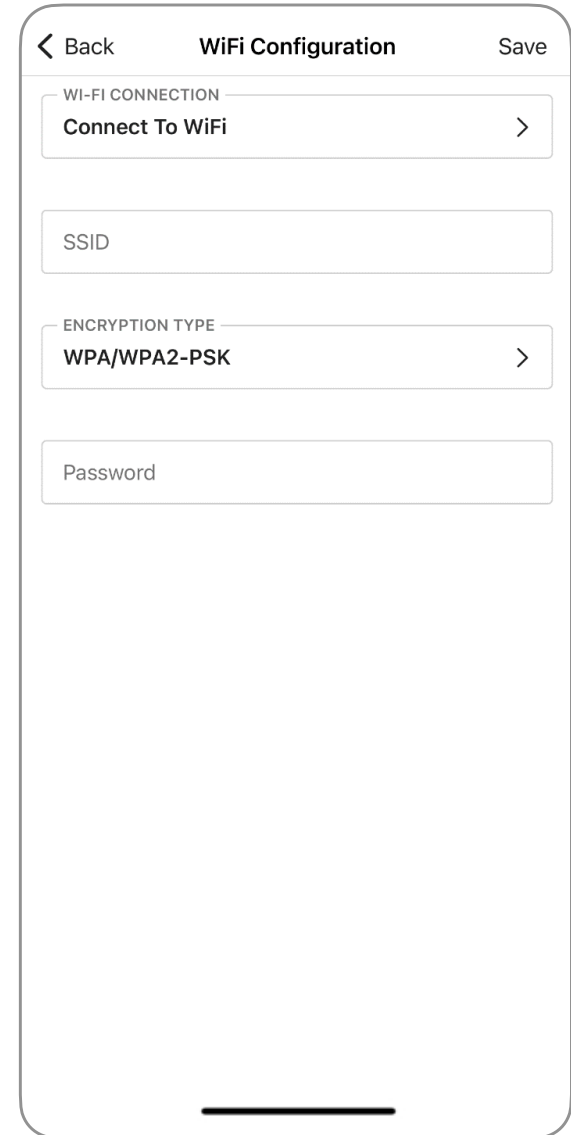

The screenshot shows a mobile application interface for "WiFi Configuration". At the top, there is a navigation bar with a back arrow, the title "WiFi Configuration", and a "Save" button. Below the navigation bar, the screen is divided into sections. The first section is titled "WI-FI CONNECTION" and contains a button labeled "Connect To WiFi" with a right-pointing chevron. Below this is a text input field labeled "SSID". The next section is titled "ENCRYPTION TYPE" and contains a button labeled "WPA/WPA2-PSK" with a right-pointing chevron. Below this is another text input field labeled "Password". At the bottom of the screen, there is a horizontal line representing the home indicator.

